User Manual

10/100/1000Mbps PCIE LAN CARD

Contents

Chapter 1 Introduction	2
1.1 Overview of the product	2
1.2 Features	2
1.3 LED Status	2
Chapter 2 Installation Guide	2
2.1 Hardware Installation	3
2.2 Software Installation	4

Chapter 1 Introduction

1.1 Overview of the product

Congratulations on your purchase of this 10/100/1000Mbps PCIe LAN Card. The Adapter provides the bandwidth capability to support high-end servers and workstations. With Auto-negotiation, this card can run on three different speeds: 10Mbps at half and full duplex, 100Mbps at half and full duplex, and 1000 Mbps at full duplex. When running at 1000Mbps, it provides a network throughput of 2 Gbps in full-duplex mode.

Instructions for installing and configuring this product can be found in this manual. Before you install and use this product, please read this manual carefully for full exploiting the functions of this product.

1.2 Features

- Compliance with IEEE802.3ab 1000BASE-T Gigabit Ethernet standards, IEEE802.3u
 Fast Ethernet standards
- > Plug-and-Play installation
- Support half and full duplex at 10Mbps, half and full duplex at 100Mbps, and full duplex operation at 1000Mbps
- > One build-in RJ45 connector
- > Auto-Negotiation to the highest available speed
- > Support IEEE802.1P Layer 2 Priority Encoding
- Support Full Duplex flow control (IEEE 802.3x)
- Support IEEE 802.1Q VLAN tagging
- > Build-in FIFO buffers reduce overhead of memory transfers
- > Support Microsoft NDIS5 Checksum Offload (IP, TCP, UDP) and large send offload
- > Support Jumbo Frame transfers
- > Two LED indicators: 10/100/1000M Link, 10/100/1000M Act
- > Driver support for:
 - Microsoft Windows Series.

Linux

Novell Netware Series

MacOS

1.3 LED Status

The Adapter features two LED indicators:

LINK/ACT: Steady green indicates good linkage between the adapter and its supporting server or switch. Flashing green indicates activity (transmitting or receiving) between the adapter.

1000M: The LED indicator lights green when one 1000 Mbps device is connected to the adapter.

Chapter 2 Installation Guide

2.1 Hardware Installation

To install the adapter, please follow these steps listed below:

- 1. Turn off your computer and unplug the power cord and all cables.
- 2. Remove your computer's case cover.
- 3. Locate an available PCIe slot.
- 4. Remove the screw that secures the back plate (the small piece of metal that covers the opening for PCIe card on the back panel of your computer), then remove the back plate.
- 5. Carefully insert the adapter into the PCIe slot. Do not touch the metal connector on the adapter.
- 6. Secure the adapter to the case using the screw you removed from the back plate.
- 7. Reinstall your computer's case cover.
- 8. Plug in the power cord and other cables, and then turn on your computer.

Note:

When the hardware has been successfully installed on your computer, you will be prompted 'Found New Hardware Wizard'; please click Cancel, and then follow the Software Installation steps to install driver for your adapter.



Found New Hardware Wizard in Windows XP

2.2 Software Installation

This section will guide you through the installation procedures for Windows XP, Please carefully follow the steps.

- 1. Insert the Resource CD into the CD-ROM drive. The Autorun setup programs Will display, or you can click on the "Browse CD" to find other OS drivers in the CD.
- 2. Click Driver Installation button to install.

Image:		
	Giga PCle Card	
	Driver Installation	
	User Manual	
	Browse CD	
		Exit

3. Restart Windows to complete the installation.

Besides you can use the following way to install:

- 1. Insert the Resource CD into the CD-ROM drive.
- 2. Right-click the icon **My Computer** on the desktop, and then click **Manage**.



3. The Computer Management window will appear. Click **Device Manager**, and then you will see the various options on the right. Click **Other devices**, and then from the drop-down list please find **Ethernet Controller**. Right-click it, and then select **Update Driver...**



4. The Hardware Update Wizard window will show up. Select Install from a list or specific location [Advanced], and then click Next.



5. Select **Search for the best driver in these locations** Click Browse and choose the system driver location of the disk, and then click **Next**.

Hardware Update Wizard		
Please choose your search and installation options.		
 Search for the best driver in these locations. 		
Use the check boxes below to limit or expand the default search, which includes local paths and removable media. The best driver found will be installed.		
Search removable media (floppy, CD-ROM)		
Include this location in the search:		
G:\Driver\WINXP\PCIE VINXP\PCIE		
O Don't search. I will choose the driver to install.		
Choose this option to select the device driver from a list. Windows does not guarantee that the driver you choose will be the best match for your hardware.		
< Back Next> Cancel		

6. Wait a few seconds for the installation.

Hardware Update Wizard		
Please wait while the wizard installs the software		
田淵	Realtek PCIe GBE Family Controller	
	RTNUninst64.dll To C:\WINDOWS\system32	
	< Back Next > Cancel	

7. Click **Finish** to complete the installation.

